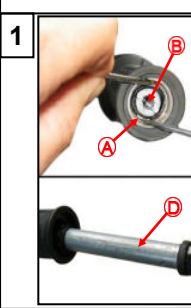
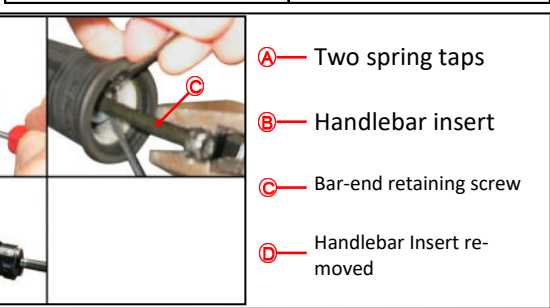

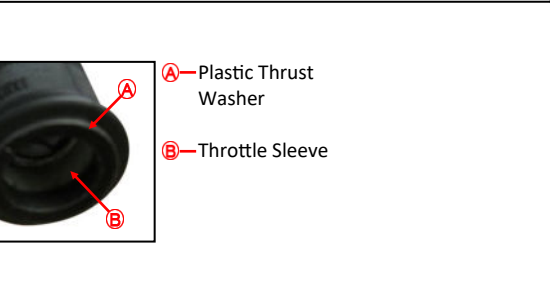
	KAOKO™ THROTTLE STABILIZER KITS: HND330	For Models <u>HONDA</u> NC750X (2018-) With OEM heated grips With OEM hand guards or Barkbusters
		Items Included in your kit Kaoko bar-end weight • Friction Nut • TH-TWD103 Thrust Washer • M8x80 Bolt M8 Steel spacer • 2mm Allen Key • Fitting Instructions
		

DISCLAIMER: NO RESPONSIBILITY ACCEPTED FOR NON-ADHERENCE TO THESE INSTRUCTIONS

KAOKO™ Safety Warning:

The KAOKO™ Throttle Stabilizer is an aftermarket accessory. Any misunderstood, abused or incorrectly installed motorcycle accessory is a safety hazard that could cause injury or death. It's the rider's responsibility to understand the operation and purpose for which the KAOKO™ Throttle Stabilizer is designed, namely, for cruising, only when safe to do so. At all other times the control should be disengaged. The KAOKO™ Throttle Stabilizers are to be used only by experienced and responsible riders. See reverse of page for full indemnity.

Note: An adjustment to throttle assembly position may be necessary to suit KAOKO™ Throttle Stabilizers. The throttle assembly position on aftermarket bars, and some OEM bars, is adjustable. The assembly can marginally be re-positioned along the handle bars slightly loosening the throttle assembly clamp screws, and then sliding the throttle assembly along the handle bars (left or right). Once done, firmly tighten the clamp screws to OEM torque specifications. This adjustment is generally not necessary.

When using copper shim

- When wrapping shim around the stem, be sure to wrap as much shim length as possible enabling the stem of the Kaoko to fit as snugly as possible.
- Fully tighten the central retaining screw ensuring the stem wedge has fully locked.
- It is advised to apply a light smear of loc-tite to both surfaces of shim prior to assembly.
- **The copper shim should be tightly wrapped around stem for a neat location fit inside the handle bar—only required when the Kaoko stem locates too loosely inside handle bar (See Figure 4)**



Figure 4

Fitting Instructions

Step 1

Step A (recommended): **Picture 1**—Remove the Throttle side bar weight. Using two small screw drivers, prize the two spring tabs towards each other and simultaneously pull out the handle bar insert. The spring tab is located deep inside the handle bar. Discard the handle bar insert.

Step B (optional—if required): **Picture 2**—Remove the Throttle side bar weight. Loosen throttle assembly clamp screws and slide the throttle assembly off the handle bar tubes. Refit the central retaining bolt to the handle bar insert, depress the handle bar insert location pins, and remove the entire insert from the handle.

Step 2

Place the plastic thrust washer into end of the throttle sleeve that the spigot of the thrust washer must thrust upon the plastic throttle sleeve. (see picture 3).

To enable improved functionality, it is recommended (not essential) to apply very light smear of Automotive grease or Petroleum jelly to the friction face of the thrust washer (See Figure 3 at the back of the page)

Step 3

Place copper shim around the stem of the Kaoko (see figure 4 above) and fit the assembled **KAOKO™ Kit** fully into the handlebar.

Step 4

When installing with OEM handguards: Place hand guard onto the end of the Kaoko bar-end weight as shown in picture 4 and secure the entire assembly using the M8x80 bolt and M8 Steel spacer as shown in picture 4.

When installing with Barkbusters: Place the Barkbuster hand guard bracket onto the end of the Kaoko bar-end weight and secure the entire assembly using only the M8x80 bolt provided in the Kaoko kit— **the M8 steel spacer is not to be used with Barkbusters hand guards!**

Step 5

Carefully set rotational resistance of the friction nut by tightening/loosening the grub screw by small adjustments using the 2mm allen key provided in the Kaoko Kit. Take care not to over tighten risking damage to threads. The nut should have fairly firm rotational resistance. See under **Maintenance below**.

Operating Instructions

The Friction Nut has a **left hand thread**. In readiness for engagement, the Friction Nut must be adjusted so that it makes light contact against the thrust washer.

To Engage: While rolling on the throttle, the Friction Nut can be gripped between the small finger and palm of hand. This action tightens the nut and provides sufficient friction to set the throttle to the desired opening. (The friction is such that the rider may still open and close the throttle. The throttle simply has a slight rotational stiffness.)

To Disengage: While rolling off the throttle, grip the Friction Nut between small finger and palm of hand.

VERY IMPORTANT!! The throttle should open and snap closed freely when correctly disengaged.

Note: The Grub Screw is set to provide the necessary resistance on thread of friction nut. This may be adjusted periodically to take up wear.

Maintenance: Remove kit annually. Unscrew Friction Nut and brush clean threads with a mild soap. Apply petroleum jelly to threads and assemble. Adjust grub screw to desired operating resistance. (O-Ring cushion: 19.6mm I.D. x 2.4mm section — if replacement is required)